


Flex Bow

Installation

Please visit www.truckpartsnz.com to reorder.

1. We recommend welding the aluminium flex bow brackets to the side of trailers. They may also be bolted. The machined face of the bracket must be vertical when installed.
2. Measure from inside of bracket to inside of bracket.
3. Add 50mm to this measurement.
4. Cut flex bow at longer measurement, this will create a 250 to 300mm arch, as per the diagram below:

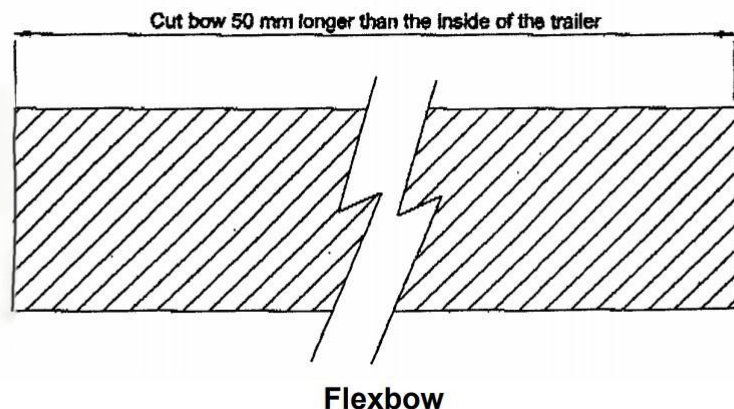

Flex Bow

Example: if the trailer is 2300mm inside to inside, cut the bow 2350mm.

5. Flex bows must have an arch to function correctly.

Remember CUT LONG!!! You can always cut again.